TH-3070-CT-B2B

Installation Instructions

telehook

Back to Back Accessory for TH-3070-CTL & TH3070-CTS

Component Checklist

Tools Required:
- 17mm(0.7") Socket Wrench or Shifter

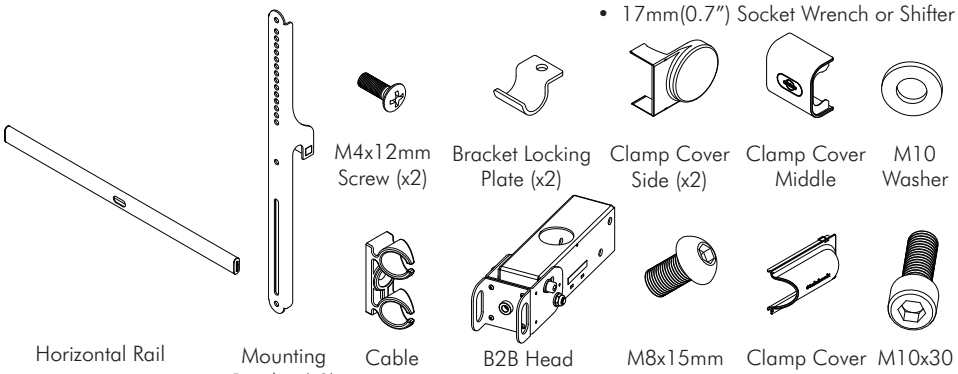

Horizontal Rail; Mounting Bracket (x2); M4x12mm Screw (x2); Cable Clip (x2); Bracket Locking Plate (x2); B2B Head Clamp Assembly; Clamp Cover Side (x2); M8x15mm Screw (x2); Clamp Cover Middle; Clamp Cover Bottom; M10 Washer; M10x30 Screw

HARDWARE

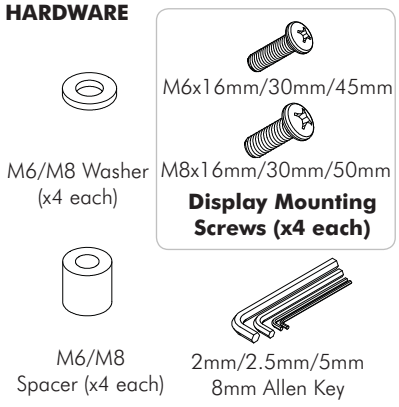

M6/M8 Washer (x4 each); M6x16mm/30mm/45mm; M8x16mm/30mm/50mm; **Display Mounting Screws (x4 each)**; M6/M8 Spacer (x4 each); 2mm/2.5mm/5mm 8mm Allen Key

IMPORTANT INFORMATION:

! IMPORTANT - Install Telehook 3070 Back to Back Accessory as per installation instruction.
! This product is to be installed in conjunction with TH-3070-CTL and TH-3070-CTS mounts only.
! The manufacturer accepts no responsibility for incorrect installation.

Step 1. Check Components

Check you have received against the component checklist and hardware above.

Step 2. Remove the clamp parts from Head Assembly of TH-3070-CTL/CTS

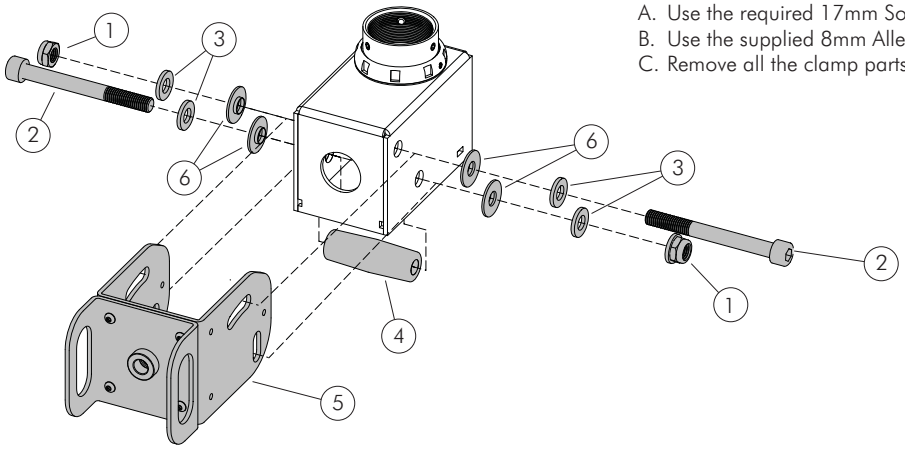

A. Use the required 17mm Socket Wrench or Shifter to hold the nuts (item 1).
B. Use the supplied 8mm Allen Key to loosen the bolts (item 2).
C. Remove all the clamp parts items 1 to 6.

Step 3. Assemble the clamp parts to B2B Head Assembly

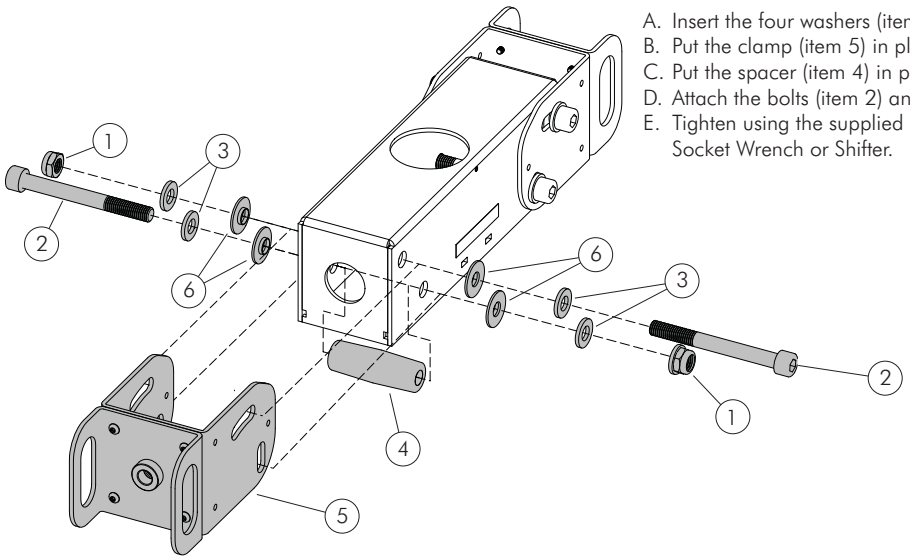

A. Insert the four washers (item 6) to the four holes.
B. Put the clamp (item 5) in place.
C. Put the spacer (item 4) in place.
D. Attach the bolts (item 2) and nuts (item 1) with washers (item 3).
E. Tighten using the supplied 8mm Allen Key paired with the required 17mm Socket Wrench or Shifter.

Step 4. Remove the collar from Head Assembly of TH-3070-CTL/CTS

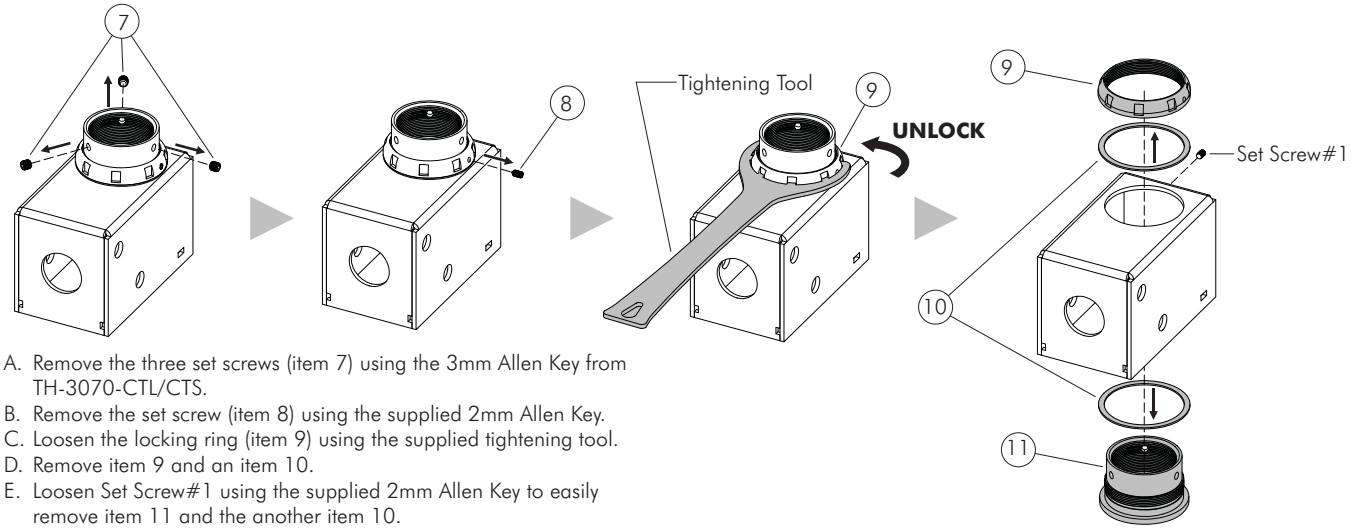

A. Remove the three set screws (item 7) using the 3mm Allen Key from TH-3070-CTL/CTS.
B. Remove the set screw (item 8) using the supplied 2mm Allen Key.
C. Loosen the locking ring (item 9) using the supplied tightening tool.
D. Remove item 9 and an item 10.
E. Loosen Set Screw#1 using the supplied 2mm Allen Key to easily remove item 11 and the another item 10.

Step 5. Assemble the collar to the B2B Head Assembly

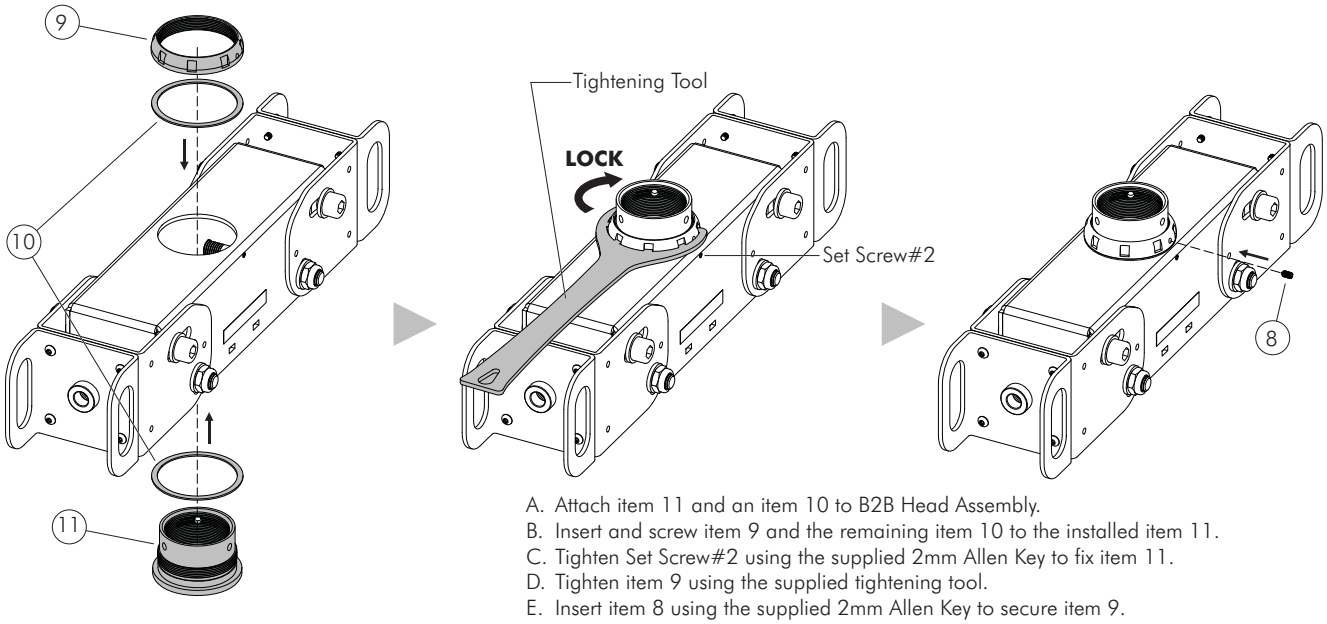

A. Attach item 11 and an item 10 to B2B Head Assembly.
B. Insert and screw item 9 and the remaining item 10 to the installed item 11.
C. Tighten Set Screw#2 using the supplied 2mm Allen Key to fix item 11.
D. Tighten item 9 using the supplied tightening tool.
E. Insert item 8 using the supplied 2mm Allen Key to secure item 9.

Step 6. Attach to TH-3070-CTL/CTS Pole Assembly

A. Attach the B2B Head Assembly to TH-3070-CTL/CTS Pole Assembly.
B. Insert the three set screws (item 7) to secure.

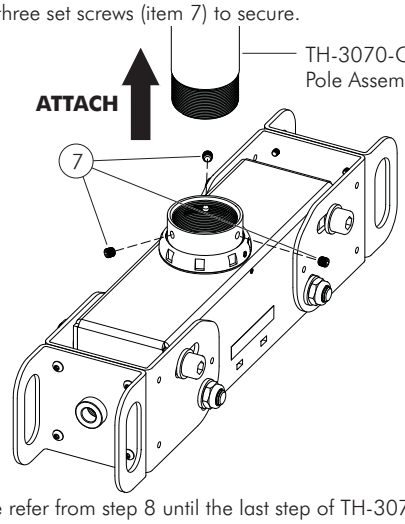

NOTE: Please refer from step 8 until the last step of TH-3070-CTL/CTS instruction manual to complete installation.

Completed installation

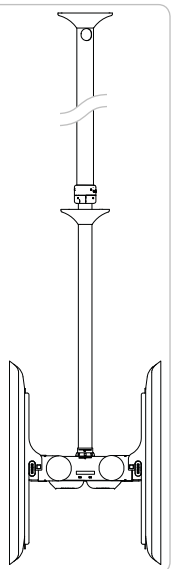

Clamp Covers installed to the B2B Head Assembly

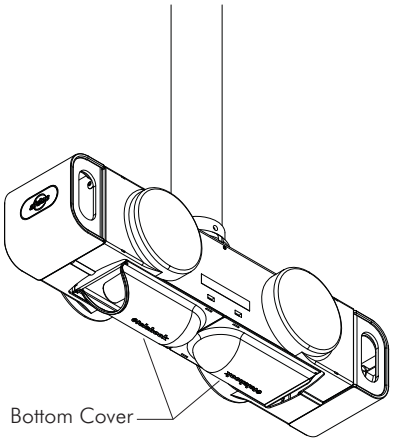

NOTE: The two bottom covers should be installed with exit/entry ports as shown.

Refer to the TH-3070-CTL/CTS Installation Manual to complete installation

No portion of this document or any artwork contained herein should be reproduced in any way without the express written consent of Atdec Pty Ltd.
Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. Published 09.09.12 ©